
### **Aftercare Instructions**

This product has a high quality, durable finish which in order to preserve, should be treated with care.

Clean with warm soapy water and a soft damp cloth only.

Cleaning products, including non-scratch ones could damage the finish surface.

#### **Water Flow Rate**

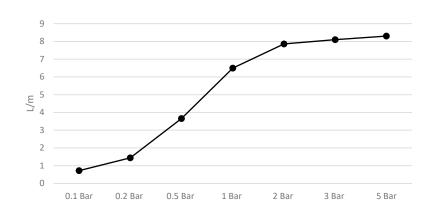

## **Customer Services**

t: +44(0)208 686 5100 e: technical@saneux.com

4 Imperial Way Croydon CRO 4RR

# www.saneux.com




# **TEMPUS**

# **TE420**

3 Set Basin Mixer

**INSTALLATION INSTRUCTIONS** 

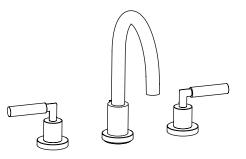

### Installation

Please note if installing in an enclosed environment, access should be left for servicing and maintenance.

- 1. Before making any inlet pipe connections, all supply pipes must be thoroughly flushed to remove debris. Failure to do so could result in damage or low flow from the mixer unit.
- 2. Refer to the components diagram and ensure all components are present before installation.
- 3. Place the mixer on the basin surface and fit the flexible hoses to the basin mixer using an appropriate spanner, make sure the hoses are not over tightened.
- 4. Screw the threaded bars to the basin mixer body.
- 5. Fit the hot and cold handles to the basin in the order indicated in the drawing.

Tighten the handles to the basin via the screws in the metal washer. DO NOT overtighten as this may damage the basin.

- 6. Connect the water supply to the flexible hoses. Hot supply should always be connected to the left hose.
- 7. Fully open the mixer on both hot & cold sides and allow the water to run for approximately one minute to further flush the system.
- 8. Check all connections and ensure there are no leaks.
- 9. Screw the waste to the waste housing through the basin (Figure 1) by threading the top half into the bottom half.
- 10. Connect the two rods (Figure 2) forming the waste release mechanism. Ensure the connection between the waste release and the waste is functional.

