AFTERCARE INSTRUCTIONS

Excessive exposure to water will deteriorate the furniture. Wipe away any water splashes or condensation after use. Do not allow water to sit on the countertops or inside the drawers.

All bathrooms should be well ventilated. We recommend the installation of a suitable extractor fan.

Clean with a soft damp cloth only.

Use a wax free polish if one must be used.

CUSTOMER SERVICE


t: +44(0)208 686 5100 e: technical@saneux.com

lain Stewart Centre, Beehive Ring Road, Gatwick, RH6 0PB

www.saneux.com


AUSTEN

INSTALLATION INSTRUCTIONS

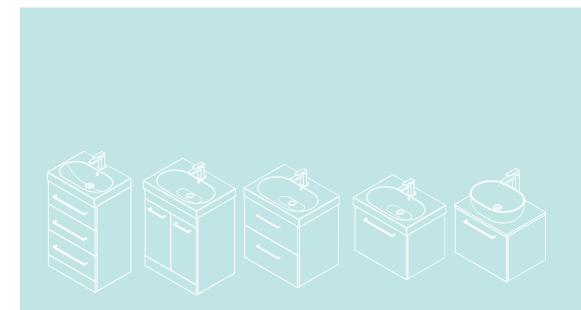

AU050F - AU050F3 - AU050W - AU050W2 AU060F - AU060F3 - AU060W - AU060W2 AU072F - AU072W - AU072W2

saneux

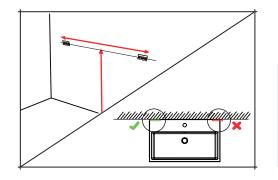

INSTALLATION NOTES

Mark the location of both mounting plates ensuring that they are positioned inside the side panels. The recommended height for the unit incliding basin is 850mm.

000


00

The Brackets may arrive fixed together, 'Snap' down the middle to seperate.



4

Drill 2 holes per mounting plate using an 8mm drill bit to a depth of 55mm. The fixings supplied are for solid walls. For hollow or stud walls use specialist fixings.

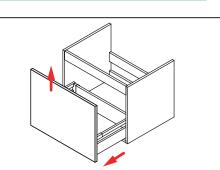


3.

1.


0

Before mounting the unit, we recommend removing the drawer/doors. To remove the drawer, it should be fully extended and pulled upwards. The entire drawer will release from the guides.


For the door units, to release the door press the release button at the back of the hinge. The door can then be removed



INSTALLATION NOTES

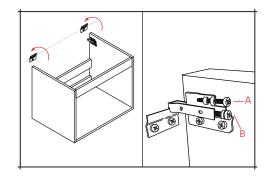


5. Secure the unit to the mounting plates using the hooks fitted on the unit. The unit can then be adjusted. Screw A adjusts the height. Screw B adjusts the depth.

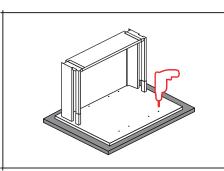



To ensure the paint does not come off the front panel, place the drawer/door (front face down) on a piece of wood. Drill the pilot holes for the handle width selected.

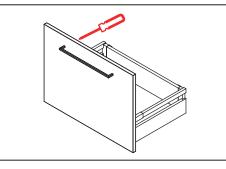



7.

Using a screw driver and the screws provided with the handle, secure the handle to the drawer/door front.

8.

Return the drawer/doors to their original location. Place the drawer on the guides and push it back until it clicks. Check that it operates smoothly. For door units simply locate the hinges back on their base plates ensuring they click into position.

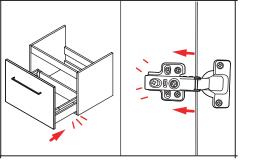

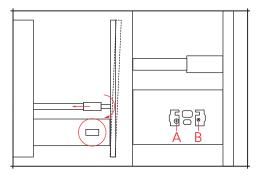

When installing with a countertop, offer the countertop to the wall mounted units and mark the position of the waste and tap holes. Place the countertop on top of a surface such as MDF and make the required holes. All holes made into wood should be sealed with a PVA or Oil Based Paint to seal the wood.

INSTALLATION NOTES

The angle of the drawer front can be adjusted by rotating the drawer bar. The width and height of the drawer can also be adjusted.

Screw A adjusts the drawer horizontally.

Screw B adjusts the drawer vertically.

11.

9.

10.

Secure the basin to the unit using a silicone sealant. If installing the countertop, make sure to use the brackets and screws supplied. IMPORTANT: Seal the edges between the basin/countertop and the furniture.