

Aftercare Instructions

Excessive exposure to water will deteriorate the furniture. Wipe away any water splashes or condensation after use.

All bathrooms should be well ventilated, if needed, with a suitable extractor fan.

Clean with a soft damp cloth only.

Use a wax free polish if one must be used.

For removal of lime scale deposits use a suitable cleaner.

Customer Services

t: +44(0)208 686 5100
e: technical@saneux.com

4 Imperial Way
Croydon CR0 4RR


www.saneux.com

s a n e u x

AUSTEN

Soft Close Side Unit 820 x 350 x 280mm
Soft Close Side Unit 1400 x 355 x 250mm

INSTALLATION INSTRUCTIONS

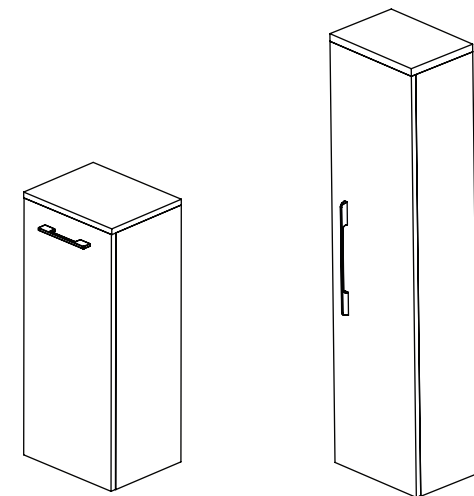

1. Fix Handle to door front using screws provided.
2. Assemble door hinges, and tighten with screws in place.
3. Mark location of both mounting plates ensuring that they are positions inside the side walls of the unit. Measure the distance between the side panels, and from the floor to the top of the bracket to find the desired location.
4. Drill the holes and insert the wall plugs
5. Screw the wall plates to the wall using the screws provided, ensure the screws are fully tight but take care not to overtighten.
6. Hang the cabinet on the wall brackets, the cabinet should be secured through proper location of the brackets
7. Mark the lower two fixing holes through the inside of the cabinet. Remove the cabinet, drill the holes and insert the wall plugs. Hang the cabinet again and secure to the wall.

