AFTERCARE INSTRUCTIONS

Excessive exposure to water will deteriorate the furniture. Wipe away any water splashes or condensation after use.

All bathrooms should be well ventilated. We recommend the installation of a suitable extractor fan.

Clean with a soft damp cloth only.

Use a wax-free polish if one must be used.

The basin waste should be regularly cleaned and cleared of any blockages to ensure the longevity of the furniture.

CUSTOMER SERVICE

t: +44 (0)208 686 5100
e: aftersales@saneux.com

Europa House, Alfold Road,
Cranleigh, Surrey GU6 8NQ

www.saneux.com


V1.TG.10/26

BROMPTON

INSTALLATION INSTRUCTIONS

BROMPTON FURNITURE

saneux

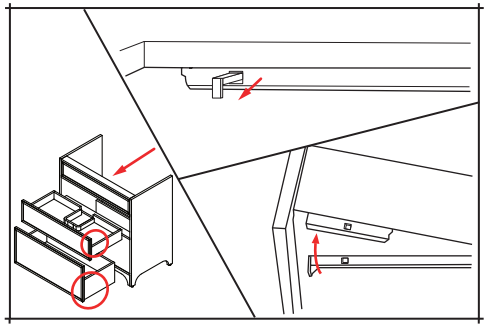


1.


To remove the drawer from the unit, fully extend the drawer. On the underside of either side of the drawer are two plastic clips that can be pushed to release the drawer from the runners.

2.

The front panel can be removed by gently pulling it until it releases from the plastic clips.

Carefully set aside the drawers and the front until the installation is complete.

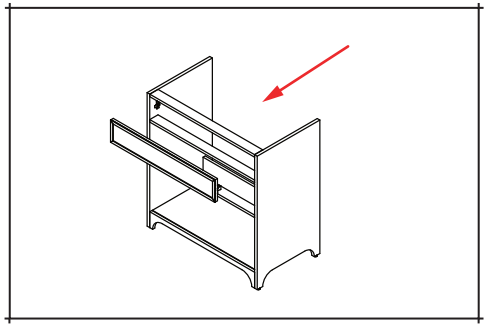

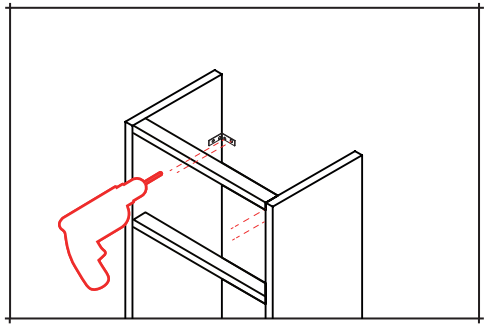


3.


Make sure there are no hidden pipes or cables in the wall. Drill 2 holes per corner plate using an 8 mm drill bit to a depth of 55 mm. The fixings supplied are for solid walls. For hollow or stud walls use specialist fixings. The unit should be tight against the wall.

4.

Make all plumbing connections and test for any leaks. We recommend the following waste accessories:

WA005 – Low profile waste trap.
530S – Click waste.
WA006 – Super low profile waste trap & click waste.

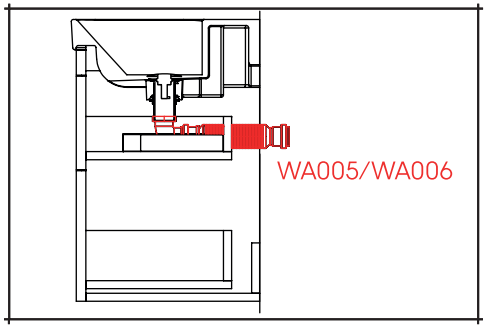

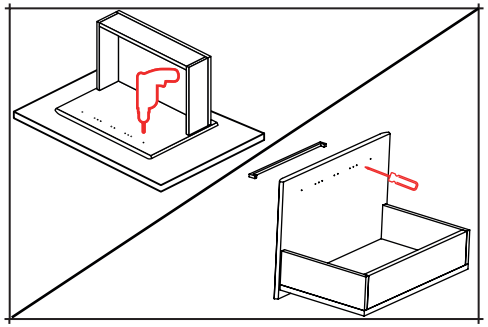

5.

To ensure the paint does not come off the front of any panels, place the door (front face down) on a wooden board. Drill the pilot holes for the handle width selected, using an **M3 drill bit.**


Make sure to measure the handle hole width before drilling.


Fit the handles to the unit using a screwdriver.

6.

To install the drawers, fully extend the runners and place the drawers on top. Gently push the drawer shut until you hear a “click”.

The front panel can be returned to the unit, ensuring the clips “click” into place.

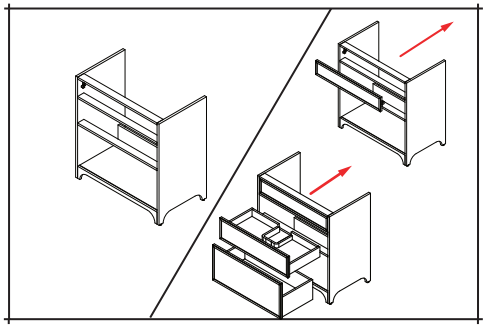

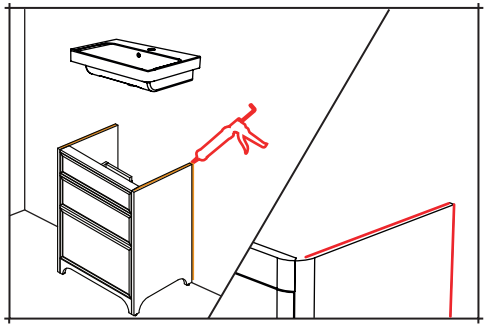

7.

Having finished all plumbing connections, secure the basin to the unit **using a silicone sealant.** Make sure the basin is correctly aligned with the furniture and allow the sealant to dry.

The silicone sealant will help the basin sit level on the furniture and protect the unit from water damage.