

Aftercare Instructions

When cleaning chlorine-based cleaners to clean the pan bowl, ensure that these do not come into contact with the seat. Keep the seat and cover in an upright position during cleaning to avoid discolouration of surfaces or rusting of metal parts.

Customer Services

t: +44(0)208 686 5100
e: technical@saneux.com

4 Imperial Way
Croydon CR0 4RR

www.saneux.com




s a n e u x

AUSTEN

50076 / 50065

Wall Mounted Pan

INSTALLATION INSTRUCTIONS

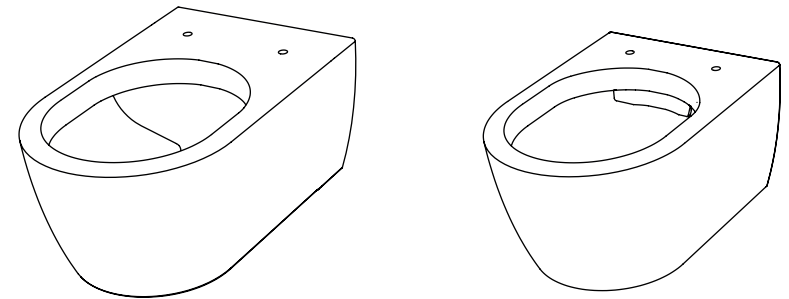

Ensure the water supply is switched off before installing the new toilet.

Install the concealed tank system in the wall before decorating the wall, using the cistern's installation instructions.

1. After installing the cistern and its frame, be careful to correctly set the spacing of carrier studs and tighten the nuts.
2. Place the pipes on the bowl and mark the pipes where they extend past the edges of the bowl.
3. Then place the pipes completely onto the sanitary unit and mark them where they emerge from the unit.
4. Measure the space between the marks on the pipes, distance 'A', carry this measurement over to the end of the pipes, adding 5mm and then cut off the end. Then use a file to smooth the pipe ends, before securing the pipes into the cistern unit.
5. Install the fixing kit onto the back of the pan.
6. Place the new toilet on the wall through the carrier holes. Apply soapy water to the connectors to help with the connection.
7. Use the provided allen key to tighten the fixings and level the toilet, then continue to finish the fixation.
8. Apply sealant to make sure the bowl's edge seals to the wall.
9. Install the seat according to the fitting instructions included in the seat's box.

