

## AFTERCARE INSTRUCTIONS

Excessive exposure to water will deteriorate the furniture. Wipe away any water splashes or condensation after use. **Do not allow water to sit on the countertops or inside the drawers**

All bathrooms should be well ventilated. We recommend the installation of a suitable extractor fan.

Clean with a soft damp cloth only.

Use a wax free polish if one must be used.

## CUSTOMER SERVICE


t: +44(0)208 686 5100  
e: [technical@saneux.com](mailto:technical@saneux.com)

Iain Stewart Centre, Beehive  
Ring Road, Gatwick, RH6 0PB

[www.saneux.com](http://www.saneux.com)


# UNI

## INSTALLATION INSTRUCTIONS

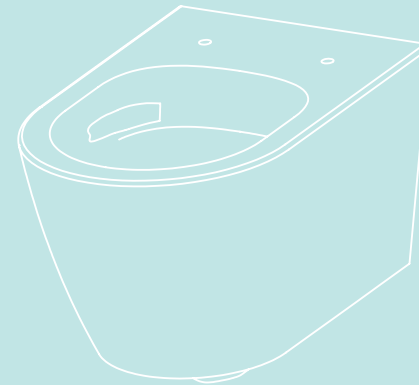

WALL MOUNTED PAN  
66076

saneux


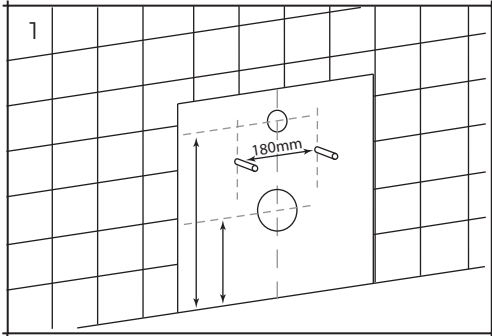


1. Ensure the water supply is switched off before installing the new toilet.

Install the concealed tank system in the wall before decorating the wall, using the cistern's installation instructions.



1. After installing the cistern and its frame, be careful to correctly set the spacing of carrier studs and tighten the nuts.

2. Place the pipes on the bowl and mark the pipes where they extend past the edges of the bowl.

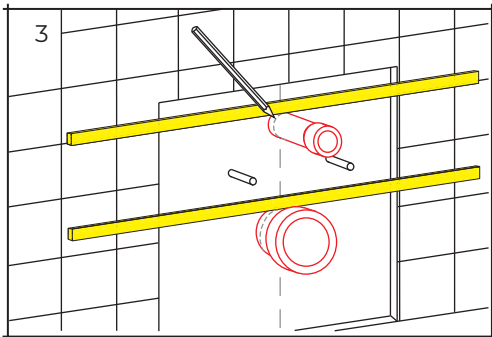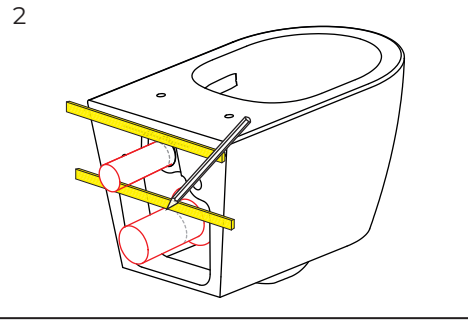



3. Then place the pipes completely onto the sanitary unit and mark them where they emerge from the unit.

4. Measure the space between the marks on the pipes (distance A), carry this measurement over to the end of the pipes, adding 5mm and then cut off the end. Then use a file to smooth the pipe ends, before securing the pipes into the cistern unit.

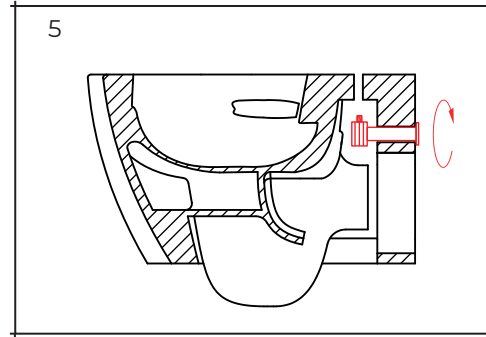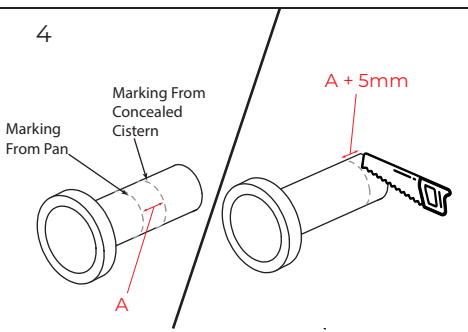

5. Install the fixing kit onto the back of the pan.

6. Place the new toilet on the wall through the carrier holes. Apply soapy water to the connectors to help with the connection.

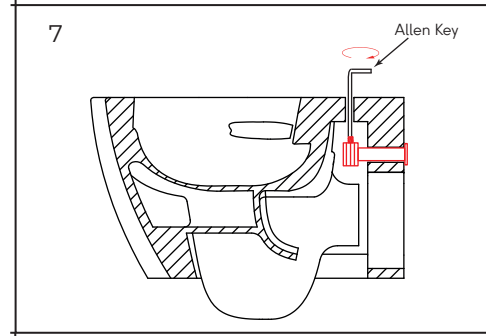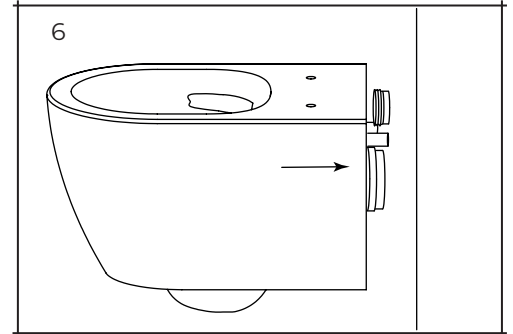

7. Use the provided allen key to tighten the fixings and level the toilet, then continue to finish the fixation.

8. Apply sealant to make sure the bowl's edge seals to the wall.

9. Install the seat according to the fitting instructions included in the seat's box.

