UNI

INSTALLATION INSTRUCTIONS

66070 - 660701 - 660702 - 66077 - 66071

saneux

AFTERCARE INSTRUCTIONS

CISTERN

Do not introduce caustic chemical sibstances (e.g. containing chlorine compounds or similar) as these may damage the valve components and cause failure.

SEAT


When using chlorine-based cleaners to clean the pan bowl, ensure that these do not come into contact with the seat. Keep the seat and cover in an upright position during cleaning to avoid discolouration of surfaces or rusting of metal parts.

CUSTOMER SERVICE


t: +44(0)208 686 5100 e: technical@saneux.com


4 Imperial Way Croydon CR0 4RR

www.saneux.com

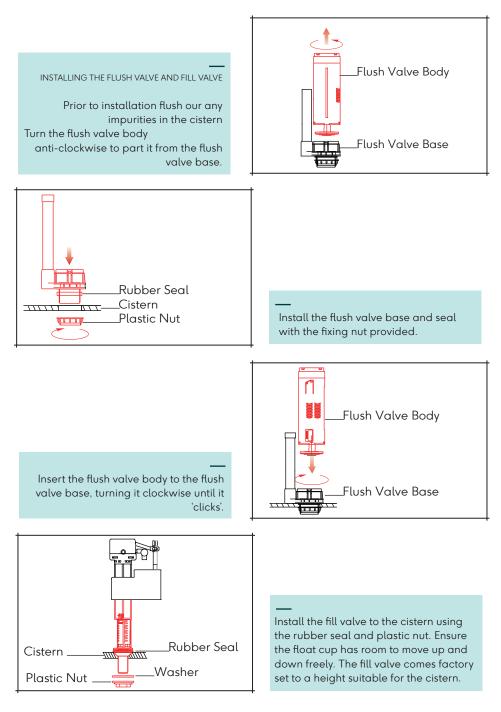


2

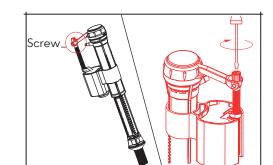


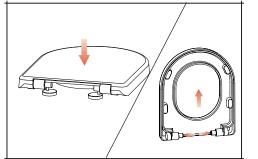

Tighten the screws fully and place the stainless steel cover plates on the hinge anchors. From the upright position, allow the seat to close on its own and check that the soft closing action is working correctly.

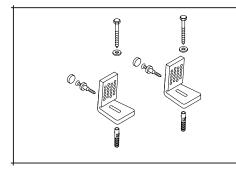


With the pan in the desired location, mark the position of the holes on the floor. Measure the ceramic thickness of the pan and mark the approximate location of the floor fixings. Drill a hole on the ground and locate the plugs so that they are flush with the ground surface. Tighten the floor fixings.

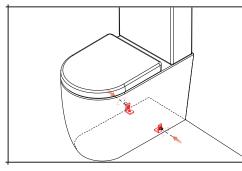


FIXING THE PAN


Make sure all components are present.

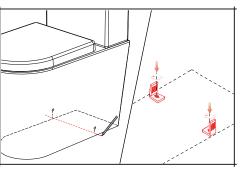

With the pan on the desired location, check that the back of the pan fully meets the wall. Remove the pan and further tighten the floor fixings. Return the pan to the desired location and secure the screws to the floor fixings through the holes on the sides of the pan.

Place cover caps on the side holes.



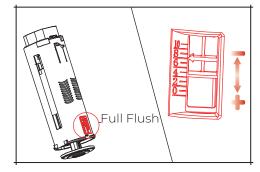

2/2: Full Flush

If the flush valve needs adjustment simply increase or decrease the full flush numbers.

The float can also be adjusted by

float down.

Half Flush

turning the screw. Clockwise moves the

float up and anti-clockwise moves the

